

SURECOOL 5B

WATER COOLER/RECIRCULATOR



TECHNICAL DETAILS

- ◆ **FILLER CAPS** (2 X 5 LITRE TANKS INTERLINKED)
(add 25% antifreeze propylene glycol) (pink)
- ◆ **ON / OFF SWITCH**
- ◆ **WATER LEVEL INDICATOR** (Tanks equalise)
- ◆ **SUPPLY CABLE - 3 CORE**
400 volt models (2 phase + earth) 3 amp fuse
230 volt models (L + N + earth) 6 amp fuse



- ◆ **TWIN FANS + HEAT EXCHANGERS**
Allow sufficient space round unit for cooling air flow.
Regularly blow dust from heat exchanger.
- ◆ **PUMP** (Centrifugal vane type)
- ◆ **MOTOR** (230 volt) or (400 volt)
If motor fails to start after period of standing idle –
Insert a screwdriver (slot head) through case to end of motor shaft and turn to free up.
- ◆ **CONNECTION BOX**
**Disconnect from power supply
before removing cover**
- ◆ **TRANSFORMER** (if fitted) 400volt – 230volt
(400 volt models only)

SUREWELD

tel: 01933 357005

fax: 01933 357606

email: info@sureweld.co.uk

web: www.sureweld.co.uk

SUREWELD (UK) LIMITED
SANDERS LODGE INDUSTRIAL ESTATE
RUSHDEN, NORTHANTS, NN10 6BQ